



**2024
TOYOTA LC70 LX**

2024 TOYOTA LC70 LX

PERFORMANCE

- 4.0L V6, 24-VALVE DOHC VVT-i
- 228 Horsepower
- 360 Nm Torque
- 6-Speed Automatic Transmission 4x4
- Petrol Engine
- 3-Door 5-Seater
- Rigid Axle Coil Front Suspension
- Rigid Axle Leaf Rear Suspension
- 16-inch Alloy Wheels. Dunlop Tires
- Traction Control
- Hill Descent Control

FEATURES

- Bluetooth Phone Set
- Cruise Control
- Lane Departure Alert
- Fridge
- Type C Charging Ports (2)
- Wood Trim Steering Wheel
- Seat Material Nubuck + Synthetic Leather
- Black Aluminum Side Steps
- Daytime Running LED Headlamps
- Spare Wheel Carrier Back Door Putside + Lock
- Tire Pressure Warning System

DIMENSIONS

- 4235mm Length; 1870mm Width; 1910mm Height
- 2310mm Wheelbase





TOYOTA LAND CRUISER

TOYOTA

TOYOTA LAND CRUISER



TOYOTA

19 41



TOYOTA

TOYOTA LAND CRUISER



TOYOTA *LAND CRUISER*



TOYOTA LAND CRUISER

815J
72E854
RF011945 BT274









Toyota Land Cruiser 2024
Model 2.8 4x4 AT
Price: 1,200,000 SAR
Warranty: 3 years / 100,000 km
Contact: 011 234 5678

09:42
Media Off
Phone Media Device Manager Apple CarPlay Android Auto
LAND CRUISER

OFF LO HI
PWR HAUL 2nd START
1:1 1:1

SRS AIRBAG



معلومات
عن التغطية التأمينية
(الرجاء)

DOOR LOCK

WINDOW LOCK

AUTO





P

Outside 35°C



ODO

80km





09:43

Media Off

Phone Media Device Manager Apple CarPlay Android Auto

LAND CRUISER

Power Home Volume Up/Down USB

OFF-LO HI

Temperature Gauge

PWR HAUL 2nd START

4x4 4x4L 4x4H 4x4L 4x4H 4x4H



Phone
Media
Device

LAMP CRUISER

OFF HI

PWR
HOLD

2nd
START

800

12V
15A

P

12V
15A



SRS AIRBAG

مقاسات وعد الصورة ني للمرأة غير حقة

警告
切勿将面朝后的儿童座椅置
可能導致死亡或嚴重傷害。
قعد الأمامي إذا لم يتم إيقاف عمل الكيس
بمناسبة الخروج خطيرة. راجع دليل المالك
DO NOT place a rear facing child seat
airbag is deactivated. DEATH OR SEVERE INJURY







152828
L1818
01/10/10



Warning: Trunk & Tire Pressure Change
Always Use Vehicle's Proper Load



FILLING SPOUT
DO NOT REMOVE FROM TANK BY
HAND. TO REMOVE, TURN THE
SCREW ON THE SPOUT TO
THE POSITION SHOWN IN THE
DIAGRAM. TO REINSTALL, TURN
THE SCREW TO THE POSITION
SHOWN IN THE DIAGRAM.
DO NOT REMOVE THE SPOUT
FROM THE TANK.









REAR SEAT
INSTRUCTIONS





شارع المنامة 77
Manama St

LX VG

TOYOTA 4WD



Al-futtaim motors



LX V6

TOYOTA 4WD



Al-futtaim motors

