



**2025
BYD LEOPARD 5 ULTRA**

2025 BYD LEOPARD 5 ULTRA

PERFORMANCE

- 5-Seater SUV Plug-In Hybrid 4x4
- 1,200 km Range Combined
- 1.5L Turbocharged 4-Cylinder Engine
- Dual Motor AWD (200 kW + 250 Kw)
- 680 Horsepower. 760 Nm Torque
- DC Fast Charging Time 15 minutes (125km)
- 0-100 km/h in 4.8 seconds
- 18-inch Rims
- Front & Rear Differential Lock, 4Low
- Sport+ Mode & Off-Road Modes, Wading Mode

FEATURES

- Intelligent Driving System
- Heated & Ventilated Seats with Massage
- Devialet Sound System
- Heated Steering Wheel
- Panoramic Roof with Power Sunroof
- 50-inch Head-Up Display
- Adaptive Cruise Control with Radar
- 360 Camera with Parking Sensors with Auto Park
- Lane Keep Assist, Lane Change Assist
- Bluetooth Phone Set
- Tire Pressure Monitoring System
- Passenger Screen, Fridge, Child Lock
- Interior Ambient Lighting
- (2) 50W Wireless Phone Charging Pads
- Electric Side Steps, Roof Rails
- Rear Heated and Ventilated Seats

























AIRBAG

08:23 43°C
TPMS
287
43
287
43
287
43
282kPa
43°C





Left side of the steering wheel controls:

- Top row: Cruise control icon, a vertical bar, and a parking brake icon.
- Middle row: A scroll wheel with "复位 + 设定 -" (Reset + Set -) text on either side.
- Bottom row: A menu icon, a vertical bar, and a "P" icon.

Right side of the steering wheel controls:

- Top row: Voice call icon, a vertical bar, and a phone icon.
- Middle row: A scroll wheel with left and right arrow icons.
- Bottom row: A star icon, a vertical bar, and a mute icon.

Bottom of the steering wheel:

 
- Left side: A scroll wheel with a mountain icon and the text "模式" (Mode).
- Right side: A scroll wheel with a mountain icon and the text "越野" (Off-road).

Dashboard display (instrument cluster):

- Left side: Tire pressure for the front left (277 kPa, 45 °C) and front right (261 kPa, 42 °C).
- Right side: Tire pressure for the rear left (277 kPa, 46 °C) and rear right (262 kPa, 43 °C). Below this, it says "Please adjust the tire pressure to standard value".

Infotainment screen:

- Top: "Chair" and "Amb" (Ambient) settings.
- Middle: "0.4km Mileage" display.
- Bottom: Navigation icons (back, home).































充电指示灯 CHARGING INDICATOR

- | | |
|--|---|
|  充电连接中闪烁
Connecting flashing |  预约充电
Schedule |
|  充电中闪烁
Charging flashing |  放电中闪烁
Discharging flashing |
|  充电完成
Completed |  充电故障
Failure |



- ① 接枪前请整车解锁、停止充电。
② 若解锁失败，请参考用户手册手动解锁。
③ 不充电时请关闭充电口盖。
- ① Please unlock the car and stop charging before pulling the vehicle connector.
② If unlock failed, please refer to the user manual to manually unlock.
③ Please close the charging port cover when not charging.





شارع المنامة
Manama St





